

CAMERA
lady

The image features the text 'CAMERA lady' in a stylized, digital font. 'CAMERA' is in a bold, blocky, white font with a red and blue glitch effect. 'lady' is in a white, cursive script font, also with a red and blue glitch effect. A white game controller icon is integrated into the letter 'A' of 'lady'. The background is dark purple with various digital effects, including white squares with red and blue borders, and a white diagonal line at the bottom right.





We turn dreams into reality



Backpack



How to Take the Doll
out from Package



Range of Skeleton
Movement



Cleaning Instruction



Cautions

 


Backpack



- When selecting implanted synthetic hair option,
wig is not included in the package



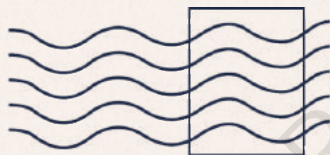

To:

How to Take the Doll out from Package



- Bring out all the equipments inside the backpack (protecting materials, head and other accessories), make sure that only the body and towel are left inside the cardboard.
- Now you have to bend your girl's elbows to about 90 degrees (make sure you bend them in the right angle).
- Same for your girl's legs - you have to bend the legs to about 90 degrees as well.
- Bearhug your girl and take her out from the magic box.



Backpack



How to Take the Doll out from Package



Range of Skeleton Movement



Cleaning Instruction



Cautions



Backpack



How to Take the Doll
out from Package



Range of Skeleton
Movement



Cleaning Instruction



Cautions

 
Range of Skeleton Movement



- As you can see from the picture, your girl is posable by having joints everywhere inside her body. The rotation/stretching range of the joints are different in terms of different body parts.





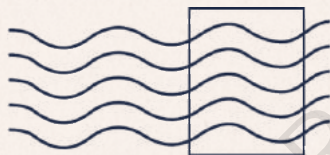

To:

Cleaning Instruction

- During the whole cleaning process, we recommend you to lay your doll on bed with a towel. Warm water and shower gel (without chemical ingredients) is always required when taking shower for your girl. Wash supplies are good for washing up the wig/hair (made of synthetic fibre).



Backpack



*How to Take the Doll
out from Package*



*Range of Skeleton
Movement*



Cleaning Instruction



Cautions



Backpack



How to Take the Doll
out from Package



Range of Skeleton
Movement



Cleaning Instruction

 


Cautions

Cleaning Instruction

- Baby powder is always helpful for reducing tackiness of silicone.
- Your girl should be cleaned monthly if they are not stored away from dust/dirt.



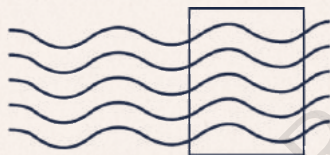

To:

Cautions

- Do not apply too much pressure on the skin or skeleton.
- Do not use a hair dryer or any other heating device on your doll.
- Do not let the doll wear dark clothes for a long time, and new clothes should be washed before wearing to avoid staining problems.
- Socks should be put on the feet before wearing shoes to avoid staining problems.
- Staining is not easy to remove. It is not recommended to use stain removal cream, which will destroy the doll's makeup.



Backpack



How to Take the Doll
out from Package



Range of Skeleton
Movement



Cleaning Instruction



Cautions



Backpack



How to Take the Doll
out from Package



Range of Skeleton
Movement



Cleaning Instruction

 


Cautions

Cautions

- Do not soak the doll in water. It will make the skeleton rust, or will produce odor due to long-term water accumulation.
- Do not keep the joints bent for a long time. It may make the doll extrude irregular texture, please try to restore each joint to a non-stressed state after display or use, such as lying down or choosing a position with little force.
- Do not use too viscous oil paste color. It will be difficult to clean.
- When removing makeup, please do not apply forcefully, you can use soapy water or makeup remover to wipe gently.



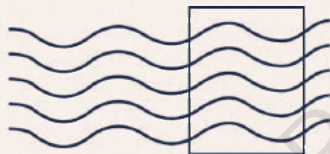

To:

*Whenever you have question, feel free to get in touch with us via email:
contact@gamelady.net*

